

Instruction for installing and usage of

Procedure for altering the numerical value of the interior:

Pressing the ADD key (10) and MINUS key (11) on the display panel at the same time for about 2 seconds, you will see the letter A on the display panel

1. Pressing the setting key(8),and then you will see the letter E, (choosing several currency system),after that you can press the ADD key or MINUS key to increase or decrease the numerical value. After setting up, please press the setting key to confirm.
2. Appearing the letter H (the quantity of sampling for various currency value)
3. Appearing the letter P (the numerical value for signal output of various currency value)
4. Appearing the letter F (the precision of various currency value)
5. By parity of reasoning, setting is finished with your chosen currency. When the letter E is shown, please turn off the power and it will reopen again.

P.S. E: Choosing several currency value.(1 -6)

H: Quantity of sampling for various currency value.(1 - 20 pieces).

P: The numerical value for signal output of various currency value. (1-50)

F: The precision of various currency value. (1-20, the smaller the number is,the more accurate the precision

is. (Suggesting number is 8)

Setting key: SET Confirming key

ADD: Numerical value "+"

MINUS: Numerical value "-"

Methods for setting coin samples:

1. Pressing the setting key, the letter A is shown. Then press the setting key again, the letter A1 is show,and the first LED light is always on, so at this moment, inputting 20 first sample coins by constant velocit.(When the setting numerical value of H 1 is 20)
2. After inputting the coins, LED lights will flicker. When the letter A2 is shown and the first two LED lights are on, please inputting 20 second sample coins by constant velocit. (When the setting numerical value of H 2 is 20)
3. After inputting the coins, LED lights will flicker. When the letter A3 is shown and the first three LED lights are on, please inputting 20 third sample coins by constant velocit. (When the setting numerical value of H 3 is 20) ,By parity of reasoning, please finish the setting. After finishing setting all the needed numerical value coins, all the LED lights will flicker several times, it can be used normally.

